


Alalog intercom manual

1. Analog intercom wiring

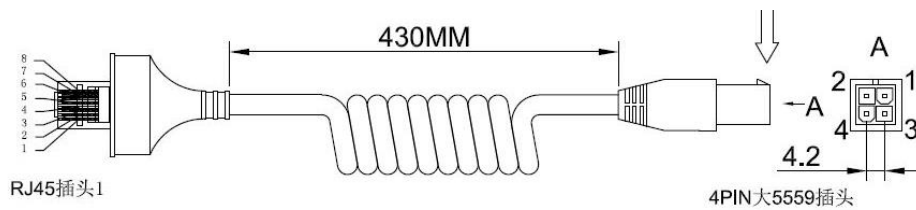

4 Pin analog intercom




Analog intercom port	NDVR 24PIN port
1	A-OUT
4	12V
3	GND
2	A-IN

Note: Under normal circumstances, the analog intercom interface can be directly connected to

the 24PIN interface.

6 Pin analog intercom

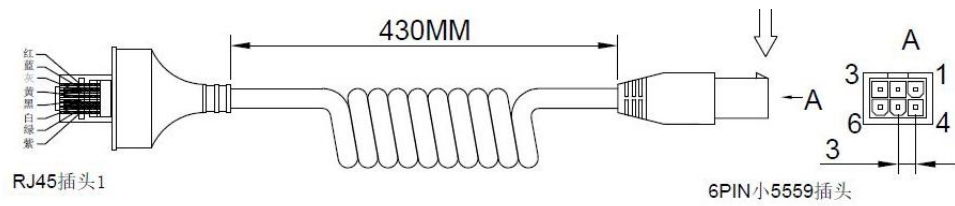

Analog intercom port	MDVR 24PIN port
1	A-OUT
4	12V
3	GND
2	A-IN
5	SENSOR-OUT
	null

Note: Under normal circumstances, the analog intercom interface can be directly connected to the 24PIN interface.

2. Connect analog intercom

Log in to the IVMS client and select Voice Intercom to open. Select device and start talk.

