


Alarm Email Configuration settings

1. Configure the storage server

Go the web server and choose the Storage Server, add the device that you select.

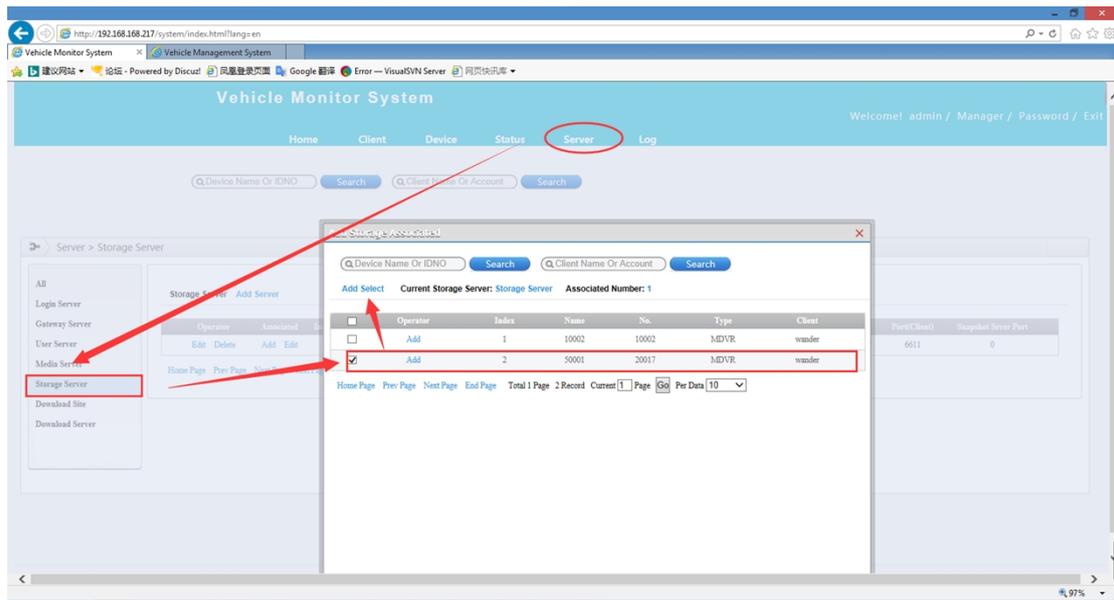

2. Config the email server.

Go to the Server window and chose Email Config, then fill in the email address, password and other blanks that marked by the red symbol(These settings are all your target email). And you can test your email configuration after setting completely.

Server Manager

Register Database DIY WAN Address History Backup

Web Config Login SMS Config **E-Mail Config** Storage Config

Start Service Stop Service Service Config Maintenance WIFI Config Exit System

Server	Information	Run Time	Version	Exe Path
Login Server	Running - Running	04:23:48	8.17.4.18	C:\Program Files (x86)\VM
Gateway Server	Running - Running	04:23:39	8.17.4.18	C:\Program Files (x86)\VM
Media Server	Running - Running	04:23:19	8.17.4.18	C:\Program Files (x86)\VM
User Server	Running - Running	04:23:16	8.17.4.18	C:\Program Files (x86)\VM
WIFI Download Server	Running - Running	04:25:18	8.17.4.18	C:\Program Files (x86)\VM
Storage Server	Running - Running	04:24:41	8.17.4.18	C:\Program Files (x86)\VM
Redis Server	Running - Running	04:24:22	8.17.4.18	C:\Program Files (x86)\VM
Data Server	Running - Running	04:24:20	8.17.4.18	C:\Program Files (x86)\VM
MySQL Server	Running - Running	04:28:28	5.5.31	C:\Program Files (x86)\VM
Web Server	Running - Running	04:28:25	8.17.4.19 20...	C:\Program Files (x86)\VM
Watch Dog	Running - Running	04:28:50	8.17.4.18	C:\Program Files (x86)\VM

E-mail Setup

E-mail Parameters

Account

Password

SMTP Address

SMTP Port

SMTP Security

Send

Recipients


Subject

Content

Test OK Cancel


3. Enter into the Vehicle Management System to set the Alarm Management.

Chose device and select Alarm Management, mark on the device and chose the type of the alarm which you want. Second, mark the email mode and text the target mailbox and other settings.

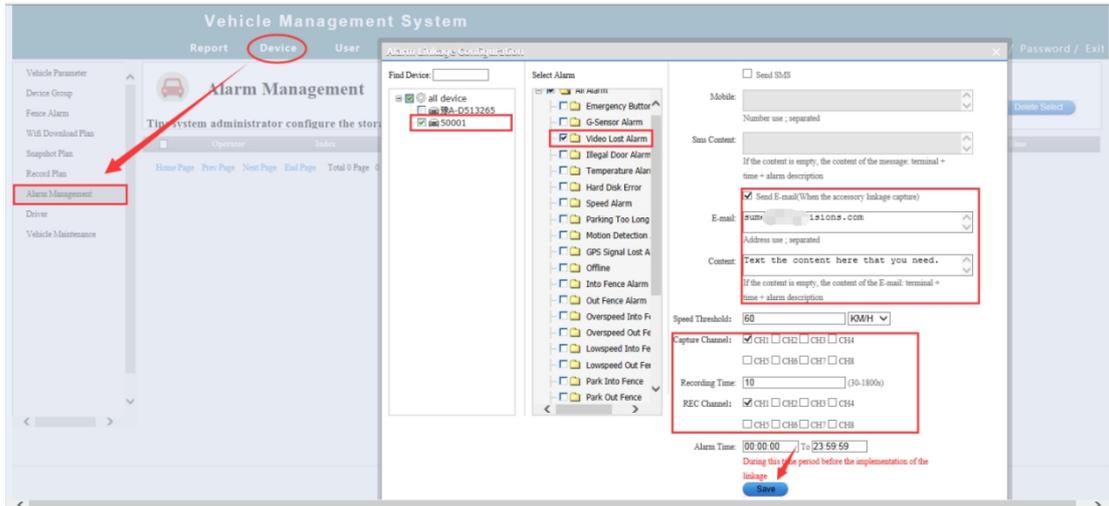

4. Go to the IVMS Client to config the alarm settings(This is alarm linkage on the PC client).

Same to the web server, in this area you can set the basic configuration such as Video Preview, Alarm Video shut-off time, Front-end Capture etc.

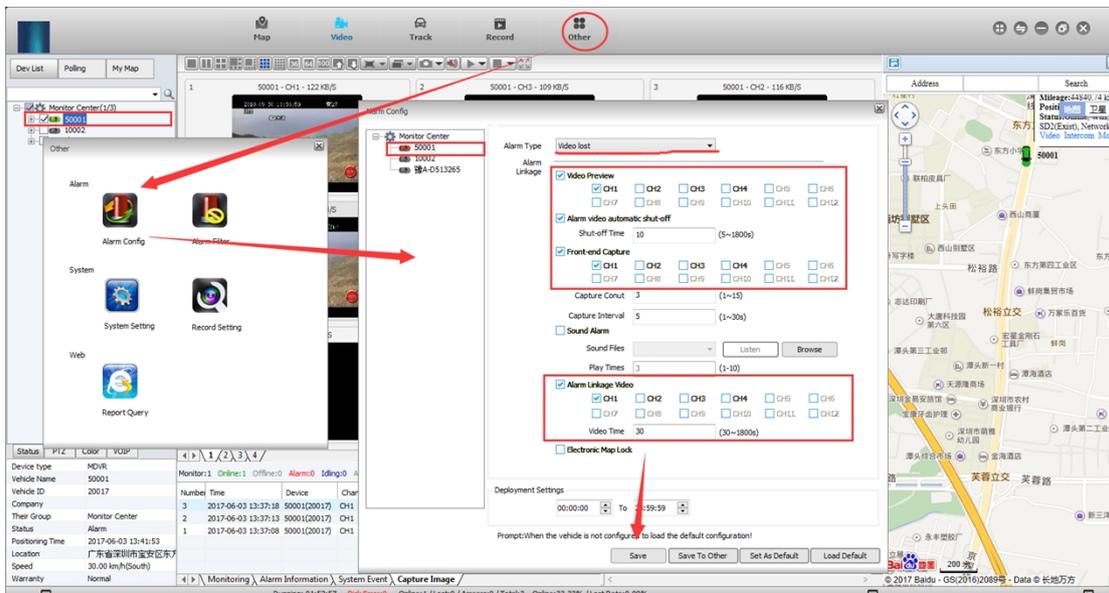

5. After completely finishing these settings, you can find this result when the device triggers the alarm. The alarm information and the capture image will be shown as below. And you can see that there is a alarm email Pop-ups at the bottom right corner. Finally you can read your email and find the alarm content in your email.

